

# User information manual alarm function

## To send an alarm manually (N.B. the unit also have an automatic Man down function)

Press the alarm button and the unit will vibrate. When the alarm centre has received the alarm, the unit will vibrate again. After approximately 15 seconds, the operator will be able to hear you through the microphone of the alarm unit.

The operator will answer with “Larmcentralen, behöver du hjälp?” (Transl; “Alarm centre, do you need help?”). Now you can inform the operator about the situation.

In parallel, another operator co-listening will follow the instructions given.

The operator needs to be informed about;

- **Where you are?** City, address etc. to verify that the GPS position is correct. NB! The alarm units for inside laboratory work do not have the GPS-function.
- **What has happened?** Injured, status etc.

## False alarm

If you happen to trigger the alarm by mistake, speak into the alarm unit that it is a false alarm and call the alarm centre (08 - 737 15 11) and leave your **units alarm number 941034/941035** and access code **190909** to the operator.

## Note!

- The alarm function is for emergency with a risk for life and health, only.
- The SRT306/SRT326 need to be recharged daily.
- The unit needs to be outside to update its GPS-position.
- The unit is always activated
- Keep the alarm on your person at all times when in use. Holsters with belt clips are placed in designated boxes at the charging station.

# User information Man Down alarm


## Activate Man Down

Press the Man Down-button for 10 seconds to activate the Man Down-function at SRT306/SRT326. The Man Down-status lamp will flash in red when activated.

## Deactivate Man Down

- ✓ Press the Man Down-button for 10 seconds until the status lamp stops flashing red
- ✓ By turning of the alarm (On/off switch)
- ✓ By connecting to the charger

## Man Down alarm

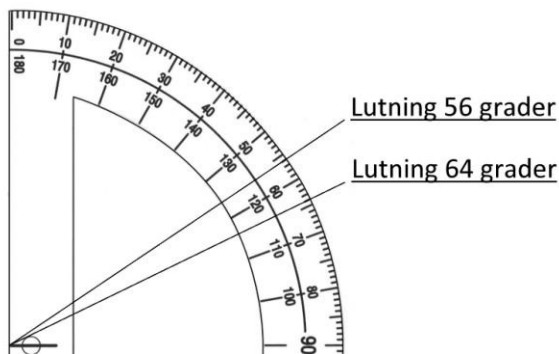

When SRT306/SRT326 is in a position tilted at least 64 degrees, a timer will be activated. When SRT306/SRT326 has been tilted at least 64 degrees for 25 seconds, the SRT306/SRT326 will warn that an alarm soon will be sent off to Securitas. The warning is a sharp signal lasting for 25 seconds. If the SRT306/SRT326 is not straightened back up to at least 56 degrees during these in total 50 seconds, the unit will send off an alarm and call Securitas.

The Man Down-function will not be deactivated after an alarm has been sent, however, for a new alarm to be sent, the SRT306/SRT326 needs to be straightened before placed in the tilting position of at least 64 degrees again.

**N.B.!** The Man down function is active even when SRT306/SRT326 is in a sleep mode.



# Quickstart guide SRT306

SRT3060210A13\_QG\_EN\_STD

**Turn on/off**

Move switch into on or off position



The personal alarm vibrates shortly and thereafter turns on/off.



**Sending an alarm**


Press the alarm button until the device vibrates.

The personal alarm vibrates as soon as the alarm has been sent.



**Acoustic warning**

If the SIM card is out of place the device will emit an audible signal. Shut the device off, extract and reinsert the SIM card and turn the device on again.

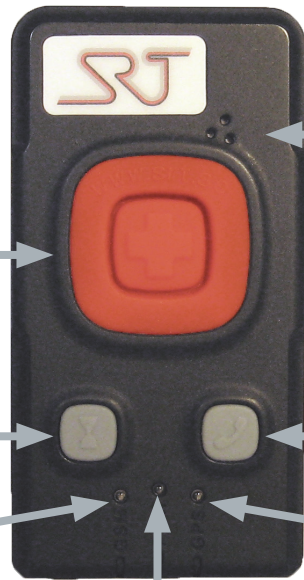

Speaker

Alarm button


Timer button

GSM status

Charge indicator

Call button

GPS/Timer/Man down status

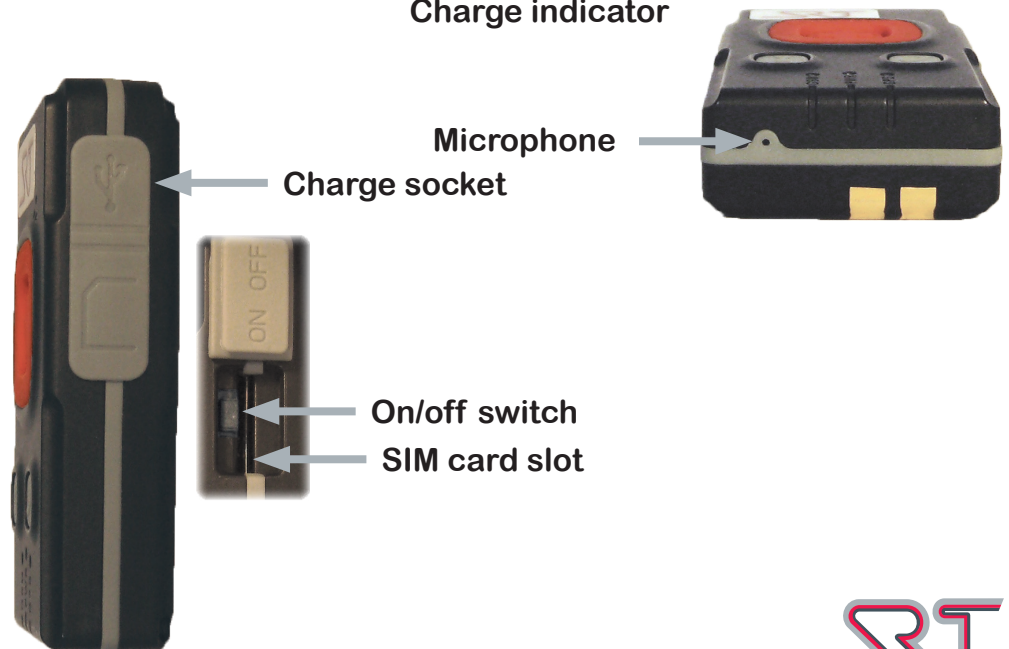

Microphone

Charge socket

On/off switch

SIM card slot



# Status LEDs

## GSM status LED

### Solid

Searching for a GSM network

### Slow blinking

Connected to a GSM network

### Rapid blinking

Voice call in progress

### No light

GSM is turned off

## GPS/Timer/

## Man down status

### Blinking (green)

The device have a current GPS position.

### No light

GPS is either turned off, is in idle mode or have no current position.

Man down is disabled.

### Blinking (red)

Timer alarm/Man down is enabled.

### Blinking (red/green)

the device have a current GPS position.

Timer alarm/Man down is enabled.

## Charge indicator LED

(no charger connected)

**Blinking three times every 15 seconds**

The device is on and shows the battery status with three blinks

Very good

● green ● green ● green

Good

● green ● green ● red

Low

● green ● red ● red

Critical

● red ● red ● red

**Alternating between solid red and green**

The device is shutting down

## Charge indicator LED

(charger connected)

**Blinking green every other second**

The device is on and charging

**Blinking red every other second**

The device is off and charging

**Solid green**

The device is on and fully charged

**Solid red**

The device is off and fully charged

**Alternating between solid red and green**

The device is shutting down

## Charging (Desktop charger)

Place the unit in the desktop charger

## Charging (USB)

Lift the rubber flap on the side of the device

Insert the charger cable into the mini USB connector.

The charge indicator LED will blink red or green when charging

The charge indicator LED will turn into a solid red or green when the device is fully charged

## Charging times

Before using your alarm device the first time it should be charged for 4 hours. Whenever the battery is fully discharged it should be charged for at least 4 hours.

The device should be charged every day.